

INSTALLATION INSTRUCTIONS:

Quick Release pendant fixtures are compatible with Odyssey Line Voltage Flexible Track, Line Voltage Track and mono-point ceiling canopies. Available in four different lengths of coaxial wire: 2', 4', 6', and 8'.

Select the appropriate fixture adapter (track or ceiling canopy) for your lighting needs. Slide glass shade over pendant assembly until seated properly on the socket. Insert Quick Disconnect Plug from pendant fixture into the adapter and twist ring to tighten (Figure 1).

SHORTENING PENDANT CABLE LENGTH:

1. Determine desired exposed cable length (e.g. 48")
2. Add 2" to desired exposed wire length and mark cable (e.g. 50")
3. Cut cable at mark.
4. Remove Quick Disconnect Plug from excess remaining cable by removing both 2mm hex set screws and the 5.5mm hex set screw (Figure 2). The Quick Disconnect Plug may now be separated from the cable. After cable is removed, refasten 2mm hex set screw located next to 5.5mm hex set screw.
5. Strip 1-1/2" of insulation only from cable leaving the braided wire in place.
6. Remove only 1-1/4" of braided wire, leaving behind 1/4" of the braided wire exposed.
7. Strip the inner stranded wire 1/8".
8. Place stripped wire end into the Quick Disconnect Plug. Push the wire all the way in until the stripped stranded wire is visible through the 2mm screw hole opening in the tip of the plug and the cable is visible in the 5.5mm screw hole.
9. With wire in place, fasten 5.5mm hex set screw until tight and cable is secure. **NOTE:** The cable insulation must be visible in the 5.5mm screw hole to ensure a properly secured pendant.
10. Confirm stripped stranded wire is still visible in opening and then fasten 2mm hex set screw in opening in plug tip.
11. Slide glass shade over pendant assembly until seated properly on the socket. Insert Quick Disconnect Plug from pendant fixture into the adapter and twist ring to tighten (Figure 1).


SHADE ASSEMBLY:

Gravity-Fit pendants capture the shade by holding the glass from below on a ledge. The shade slides over the cable and sits on the ledge. Seat glass on the pendant fixture before attaching to the fixture adapter.

IMPORTANT SAFETY INSTRUCTIONS:

- Read all the instructions before installation. Save instructions for later use.
- Turn off power at fuse or circuit breaker box before installation of before doing any maintenance work.
- Product must be mounted in locations and at heights in a manner consistent with its intended use, and in compliance with National Electrical Code and local building codes. For indoor use only.
- Product must be grounded to avoid potential electric shock and any other potential hazards.
- Do not exceed the nominal supply voltage or amperage ratings.
- Make sure all screws are properly tightened.
- Installing contrary to instructions may cause unsafe conditions.
- **Warning:** Risk of fire. Most dwellings built before 1985 have supply wire rated at 60°C. Consult a qualified electrician before installation.
- To avoid hazards to children, account for all parts and properly dispose of all packing materials.
- Call the Technical Support department at ConTech Lighting with any installation questions: 847-559-5500.

1

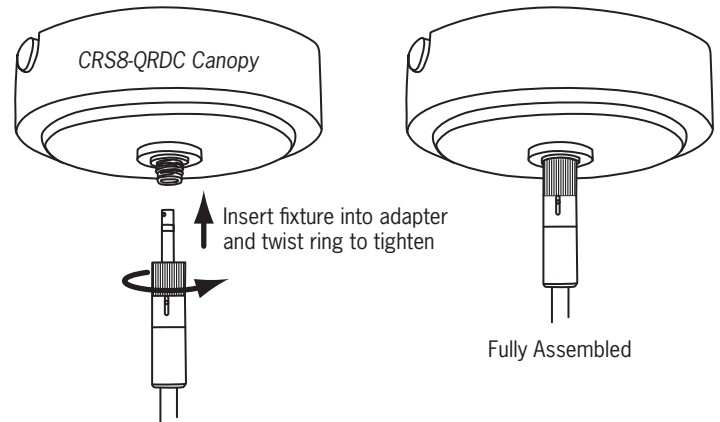

2

